

# EE120 Course Notes

Anmol Parande

Fall 2019 - Professor Murat Arcaç

**Disclaimer:** These notes reflect 120 when I took the course (Fall 2019). They may not accurately reflect current course content, so use at your own risk. If you find any typos, errors, etc, please raise an issue on the GitHub repository.

## Contents

<b>1</b>	<b>Introduction to Signals and Systems</b>	<b>3</b>
1.1	Types of Signals . . . . .	3
1.1.1	Properties of the Unit Impulse . . . . .	3
1.2	Signal transformations . . . . .	3
1.3	Convolution . . . . .	4
1.4	Systems and their properties . . . . .	4
1.5	Exponential Signals . . . . .	5
<b>2</b>	<b>The Fourier Series</b>	<b>5</b>
2.1	Continuous Time . . . . .	5
2.2	Discrete Time . . . . .	6
2.3	Properties of the Fourier Series . . . . .	7
2.4	Interpreting the Fourier Series . . . . .	8
2.4.1	Discrete Time . . . . .	8
2.4.2	Continuous Time . . . . .	9
<b>3</b>	<b>The Fourier Transform</b>	<b>9</b>
3.1	Continuous Time Fourier Transform . . . . .	9
3.1.1	Properties of the CTFT . . . . .	10
3.1.2	Convergence of the CTFT . . . . .	11
3.2	Discrete Time Fourier Transform . . . . .	12
3.2.1	Properties of the DTFT . . . . .	12
3.2.2	Convergence of the DTFT . . . . .	13
3.3	Discrete Fourier Transform . . . . .	14
3.4	2D Fourier Transforms . . . . .	15

<b>4</b>	<b>Generalized transforms</b>	<b>15</b>
4.1	Laplace Transform . . . . .	15
4.1.1	Properties of the Laplace Transform . . . . .	16
4.2	The Unilateral Laplace Transform . . . . .	16
4.3	The Z Transform . . . . .	17
4.3.1	Properties of the Z-Transform . . . . .	17
4.4	Unilateral Z-Transform . . . . .	18
<b>5</b>	<b>Linear Time-Invariant Systems</b>	<b>18</b>
5.1	Impulse Response of LTI systems . . . . .	18
5.1.1	The Discrete Case . . . . .	19
5.1.2	The Continuous Case . . . . .	19
5.2	Determining Properties of an LTI system . . . . .	19
5.2.1	Causality . . . . .	19
5.2.2	Memory . . . . .	20
5.2.3	Stability . . . . .	20
5.3	Frequency Response and Transfer Functions . . . . .	20
5.3.1	Stability of transfer functions . . . . .	21
5.3.2	Bode Plots . . . . .	21
5.4	Special LTI Systems . . . . .	23
5.4.1	Linear Constant Coefficient Difference/Differential Equations . . . . .	23
5.4.2	State Space Equations . . . . .	25
5.4.3	Second Order Systems . . . . .	26
<b>6</b>	<b>Feedback Control</b>	<b>27</b>
6.1	Types of Control . . . . .	27
6.1.1	Constant Gain Control . . . . .	27
6.1.2	Lead Control . . . . .	27
6.1.3	Integral Control . . . . .	28
6.2	Root Locus Analysis . . . . .	28
6.3	Feedback Controller Design . . . . .	29
6.3.1	Steady State Tracking Accuracy . . . . .	29
6.3.2	Disturbance Rejection . . . . .	30
6.3.3	Noise Insensitivity . . . . .	30
<b>7</b>	<b>Sampling</b>	<b>31</b>
7.1	Continuous Time . . . . .	31
7.2	Discrete Time . . . . .	33
7.3	Sampling as a System . . . . .	33
<b>8</b>	<b>Appendix</b>	<b>34</b>
8.1	Theory of Distributions . . . . .	34

# 1 Introduction to Signals and Systems

## 1.1 Types of Signals

**Definition 1** A signal is a function of one or more variables

**Definition 2** A continuous signal  $x(t)$  maps  $\mathbb{R} \rightarrow \mathbb{R}$

**Definition 3** A discrete signal  $x[n]$  maps  $\mathbb{Z} \rightarrow \mathbb{R}$

### 1.1.1 Properties of the Unit Impulse

**Definition 4** The unit impulse in discrete time is defined as

$$\delta[n] = \begin{cases} 1, & \text{if } n = 0 \\ 0, & \text{else} \end{cases}$$

- $f[n]\delta[n] = f[0]\delta[n]$
- $f[t]\delta[n - N] = f[N]\delta[n - N]$

**Definition 5** The unit impulse in continuous time is the dirac delta function

$$\delta(t) = \lim_{\Delta \rightarrow 0} \delta_{\Delta}(t)$$
$$\delta_{\Delta} = \begin{cases} \frac{1}{\Delta}, & \text{if } t \geq 0 \\ 0, & \text{else} \end{cases}$$

- $f(t)\delta(t) = f(0)\delta(t)$
- $f(t)\delta(t - \tau) = f(\tau)\delta(t - \tau)$
- $\delta(at) = \frac{1}{|a|}\delta(t)$

**Definition 6** The unit step is defined as

$$u[n] = \begin{cases} 1, & \text{if } n \geq 0 \\ 0, & \text{else} \end{cases}$$

## 1.2 Signal transformations

Signals can be transformed by modifying the variable.

- $x(t - \tau)$ : Shift a signal left by  $\tau$  steps.
- $x(-t)$ : Rotate a signal about the  $t = 0$
- $x(kt)$ : Stretch a signal by a factor of  $k$

These operations can be combined to give more complex transformations. For example,  $y(t) = x(\tau - t) = x(-(t - \tau))$  flips  $x$  and shifts it right by  $\tau$  timesteps. This is equivalent to shifting  $x$  left by  $\tau$  timesteps and then flipping it.

### 1.3 Convolution

**Definition 7** *The convolution of two signals in discrete time*

$$(x * h)[n] = \sum_{k=-\infty}^{\infty} x[k]h[n-k]$$

**Definition 8** *The convolution of two signals in continuous time*

$$(x * h)(t) = \int_{-\infty}^{\infty} x(\tau)h(t-\tau)d\tau$$

While written in discrete time, these properties apply in continuous time as well.

- $(x * \delta)[n] = x[n]$
- $x[n] * \delta[n-N] = x[n-N]$
- $(x * h)[n] = (h * x)[n]$
- $x * (h_1 + h_2) = x * h_1 + x * h_2$
- $x * (h_1 * h_2) = (x * h_1) * h_2$

### 1.4 Systems and their properties

**Definition 9** *A system is a process by which input signals are transformed to output signals*

**Definition 10** *A memoryless system has output which is only determined by the input's present value*

**Definition 11** *A causal system has output which only depends on input at present or past times*

**Definition 12** *A stable system produces bounded output when given a bounded input. By extension, this means an unstable system is when  $\exists$  a bounded input that makes the output unbounded.*

**Definition 13** *A system is time-invariant if the original input  $x(t)$  is transformed to  $y(t)$ , then  $x(t-\tau)$  is transformed to  $y(t-\tau)$*

**Definition 14** *A system  $f(x)$  is linear if and only if*

- *If  $y(t) = f(x(t))$ , then  $f(ax(t)) = ay(t)$  (Scaling)*
- *If  $y_1(t) = f(x_1(t))$  and  $y_2(t) = f(x_2(t))$ , then  $f(x_1(t) + x_2(t)) = y_1(t) + y_2(t)$  (Superposition)*

**Notice:** The above conditions on linearity require that  $x(0) = 0$  because if  $a = 0$ , then we need  $y(0) = 0$  for scaling to be satisfied

**Definition 15** The impulse response of a system  $f[x]$  is  $h[n] = f[\delta[n]]$ , which is how it response to an impulse input.

**Definition 16** A system has a Finite Impulse Response (FIR) if  $h[n]$  decays to zero in a finite amount of time

**Definition 17** A system has an Infinite Impulse Response (IIR) if  $h[n]$  does not decay to zero in a finite amount of time

## 1.5 Exponential Signals

Exponential signals are important because they can succinctly represent complicated signals using complex numbers. This makes analyzing them much easier.

$$x(t) = e^{st}, x[n] = z^n (s, z \in \mathbb{C})$$

**Definition 18** The frequency response of a system is how a system responds to a purely oscillatory signal

## 2 The Fourier Series

### 2.1 Continuous Time

**Definition 19** A function  $x(t)$  is periodic if  $\exists T$  such that  $\forall t, x(t - T) = x(t)$ .

The smallest such  $T$  which satisfies the periodicity property is known as the **Fundamental Period**.

**Theorem 1** If  $x(t)$  and  $y(t)$  are functions with period  $T_1$  and  $T_2$  respectively, then  $x(t) + y(t)$  is periodic if  $\exists m, n \in \mathbb{Z}$  such that  $mT_1 = nT_2$ .

**Definition 20** Given a periodic function  $x(t)$  with fundamental period  $T$  and fundamental frequency  $\omega_0 = \frac{2\pi}{T}$ , the Fourier Series of  $x$  is a weighted sum of the harmonic functions.

$$x(t) = \sum_{k=-\infty}^{\infty} a_k e^{jk\omega_0 t}$$

To find the coefficients  $a_k$ :

$$x(t) \cdot e^{-jn\omega_0 t} = \sum_{k=-\infty}^{\infty} a_k e^{j\omega_0 t(k-n)}$$

$$\int_T x(t) \cdot e^{-jn\omega_0 t} dt = \sum_{k=-\infty}^{\infty} a_k \int_T e^{j\omega_0 t(k-n)} dt = \begin{cases} Ta_k & \text{if } k=n \\ 0 & \text{else} \end{cases}$$

Rearranging this, we can see that

$$a_n = \frac{1}{T} \int_T x(t) e^{-jn\omega_0 t} dt$$

. For  $a_0$ , the DC offset term, this formula makes a lot of sense because it is just the average value of the function over one period.

$$a_0 = \frac{1}{T} \int_T x(t) dt$$

Because the Fourier Series is an infinite sum, there is a worry that for some functions  $x(t)$ , it will not converge. The **Dirichlet Convergent Requirements** tell us when the Fourier Series converges. More specifically, they tell us when

$$\lim_{M \rightarrow \infty} x_M(\tau) = x(\tau) \forall \tau, x_M(t) = \sum_{k=-M}^M a_k e^{jk\omega_0 t}$$

will converge.

**Theorem 2** *The Fourier Series of a continuous time periodic function  $x(t)$  will converge when  $x$  is piecewise continuous and  $\frac{d}{dt}x$  is piecewise continuous.*

- If  $x$  is continuous at  $\tau$ ,  $\lim_{M \rightarrow \infty} x_M(\tau) = x(\tau)$
- If  $x$  is discontinuous at  $\tau$ , then  $\lim_{M \rightarrow \infty} x_M(\tau) = \frac{1}{2}(x(\tau^-) + x(\tau^+))$

These convergence requirements are for pointwise convergence only. They do not necessarily imply that the graphs of the Fourier Series and the original function will look the same.

## 2.2 Discrete Time

The definition for periodicity in discrete time is the exact same as the definition in continuous time.

**Definition 21** *A function  $x[n]$  is periodic with period  $N \in \mathbb{Z}$  if  $\forall n, x[n+N] = x[n]$*

However, there are some differences. For example,  $x[n] = \cos(\omega_0 n)$  is only periodic in discrete time if  $\exists N, M \in \mathbb{Z}, \omega_0 N = 2\pi M$ .

**Theorem 3** *The sum of two discrete periodic signals is periodic*

The above statement is not always true in continuous time but it is in discrete time.

The Fourier Series in discrete time is the same idea as the Fourier series in continuous time: to express every signal as a linear combination of complex exponentials. The discrete time basis that we use are the Nth roots of unity.

$$\phi_k[n] = e^{jk\frac{2\pi}{N}n}$$

- $\phi_k[n]$  is periodic in n (i.e  $\phi_k[n + N] = \phi_k[n]$ )
- $\phi_k[n]$  is periodic in k (i.e  $\phi_{k+N}[n] = \phi_k[n]$ )
- $\phi_k[n] \cdot \phi_m[n] = \phi_{k+m}[n]$

Notice that with this basis, there are only N unique functions that we can use. An additional property of the  $\phi_k[n]$  is that

$$\sum_{n=\langle N \rangle} \phi_k[n] = \begin{cases} N & \text{if } k = 0, \pm N, \pm 2N \\ 0 & \text{otherwise} \end{cases}$$

**Definition 22** Given a periodic discrete-time function  $x[n]$  with period  $N$ , the Fourier series of the function is a weighted sum of the roots of unity basis functions.

$$x[n] = \sum_{k=0}^{N-1} a_k \phi_k[n]$$

In order to find the values of  $a_k$ , we can perform a similar process as in continuous time.

$$\begin{aligned} x[n] &= \sum_{k=0}^{N-1} a_k \phi_k[n] \\ x[n] \phi_{-M}[n] &= \sum_{k=0}^{N-1} a_k \phi_k[n] \phi_{-M}[n] \\ \sum_{n=\langle N \rangle} x[n] \phi_{-M}[n] &= \sum_{n=\langle N \rangle} \sum_{k=\langle N \rangle} a_k \phi_{k-M}[n] = \sum_{k=\langle N \rangle} a_k \sum_{n=\langle N \rangle} \phi_{k-M}[n] \\ &= \sum_{n=\langle N \rangle} x[n] \phi_{-M}[n] = a_M N \\ a_M &= \frac{1}{N} \sum_{n=\langle N \rangle} x[n] \phi_{-M}[n] \end{aligned}$$

### 2.3 Properties of the Fourier Series

**Linearity:** If  $a_k$  and  $b_k$  are the coefficients of the Fourier Series of  $x(t)$  and  $y(t)$  respectively, then  $Aa_k + Bb_k$  are the coefficients of the Fourier series of  $Ax(t) + By(t)$

**Time Shift:** If  $a_k$  are the coefficients of the Fourier Series of  $x(t)$ , then  $b_k = e^{-jk\frac{2\pi}{T}t_0}a_k$  are the coefficients of the Fourier Series of  $\hat{x}(t) = x(t - t_0)$

**Time Reversal:** If  $a_k$  are the coefficients of the Fourier Series of  $x(t)$ , then  $b_k = a_{-k}$  are the coefficients of the Fourier Series of  $x(-t)$

**Conjugate Symmetry:** If  $a_k$  are the coefficients of the Fourier Series of  $x(t)$ , then  $a_k^*$  are the coefficients of the Fourier Series of  $x^*(t)$ . This means that  $x(t)$  is a real valued signal, then  $a_k = a_{-k}^*$

**Theorem 4 (Parseval's Theorem)**

$$\frac{1}{T} \int |x(t)|^2 dt = \sum_{k=-\infty}^{\infty} |a_k|^2 \text{(ContinuousTime)}$$

$$\frac{1}{N} \sum_{n=\langle N \rangle} |x[n]|^2 = \sum_{k=\langle N \rangle} |a_k|^2 \text{(DiscreteTime)}$$

## 2.4 Interpreting the Fourier Series

A good way to interpret the Fourier Series is as a change of basis. In both the continuous and discrete case, we are projecting our signal  $x$  onto a set of basis functions, and the coefficients  $a_k$  are the coordinates of our signal in the new space.

### 2.4.1 Discrete Time

Since in discrete time, signal is periodic in  $N$ , we can turn any it into a vector  $\vec{x} \in \mathbb{C}^N$ .

$$\vec{x} = \begin{bmatrix} x[0] \\ x[1] \\ \vdots \\ x[N-1] \end{bmatrix} \in \mathbb{C}^N$$

We can use this to show that  $\phi_k$  form an orthogonal basis. If we take two of them  $\phi_k[n]$  and  $\phi_M[n]$  ( $k \neq M$ ) and compute their dot product of their vector forms, then

$$\phi_k[n] \cdot \phi_M[n] = \phi_M^* \phi_k = \sum_{\langle n \rangle} \phi_{k-M}[n] = 0$$

That means that  $\phi_k$  and  $\phi_M$  are orthogonal, and they are  $N$  of them, therefore they are a basis. If we compute their magnitudes, we see

$$\phi_k \cdot \phi_k = \|\phi_k\|^2 = N, \therefore \|\phi_k\| = \sqrt{N}$$

Finally, if we compute  $\vec{x} \cdot \vec{\phi}_M$  where  $\vec{x}$  is the vector form of an  $N$ -periodic signal,

$$\vec{x} \cdot \vec{\phi}_M = \left( \sum_{i=0}^{N-1} a_i \phi_i \right) \cdot \phi_M = N a_m$$



$$a_m = \frac{1}{N} \vec{x} \cdot \phi_M$$

This is exactly the equation we use for finding the Fourier Series coefficients, and notice that it is a projection since  $N = \|\phi_m\|^2$ . This gives a nice geometric intuition for Parseval's theorem.

$$\frac{1}{N} \sum |x[n]|^2 = \frac{1}{N} \|\vec{x}\|^2 = \sum |a_k|^2$$

because we know the norms of two vectors in different bases must be equal.

### 2.4.2 Continuous Time

In continuous time, our bases functions are  $\phi_k(t) = e^{jk\frac{2\pi}{T}t}$  for  $k \in (-\infty, \infty)$ . Since we can't convert continuous functions into vectors, these  $\phi_k$  are really a basis for the vector space of square integrable functions on the interval  $[0, T]$ . The inner product for this vector space is

$$\langle x, y \rangle = \int_0^T x(t)y^*(t)$$

We can use this inner product to conduct the same proof as we did in discrete time.

## 3 The Fourier Transform

### 3.1 Continuous Time Fourier Transform

**Definition 23** *The Continuous Time Fourier Transform converts an aperiodic signal into the frequency domain.*

$$X(\omega) = \int_{-\infty}^{\infty} x(t)e^{-j\omega t} dt$$

The intuition for this transform comes from the Fourier Series. Only periodic signals can be represented by the Fourier Series. If we start with a finite signal  $x(t)$ , then we can just make it periodic by copying the domain over which it is nonzero so it repeats over a period  $T$ . Call this signal  $\tilde{x}(t)$ . Since  $\tilde{x}$  is periodic, we can find its fourier series coefficients.

$$a_k = \frac{1}{T} \int_T \tilde{x}(t)e^{-jn\frac{2\pi}{T}t} = \frac{1}{T} \int_T x(t)e^{-jn\frac{2\pi}{T}t} = \frac{1}{T} \int_{-\infty}^{\infty} x(t)e^{-jn\frac{2\pi}{T}t}$$

These steps are possible because  $\tilde{x}(t) = x(t)$  over a single period, and  $x(t)$  is zero outside that period.

$$T a_k = \int_{-\infty}^{\infty} x(t)e^{-jn\frac{2\pi}{T}t}$$

notice that if we let  $T$  approach infinity, then  $\omega_0 = \frac{2\pi}{T}$  becomes very small, so the  $Ta_k$  can almost be thought of as samples of some continuous time function. What this means is for a general aperiodic signal, regardless of if it is finite or not, we can think of it as having "infinite period" and thus made up of a continuous set of frequencies. This is what motivates the continuous time fourier transform.

**Definition 24** *The Inverse Continuous Time Fourier Transform takes us from the frequency domain representation of a function  $X(\omega)$  to its time domain representation  $x(t)$*

$$x(t) = \frac{1}{2\pi} \int_{-\infty}^{\infty} X(\omega) e^{j\omega t} d\omega$$

We can arrive at this equation by starting from the Fourier series again Our faux signal  $\tilde{x}(t)$  which was the periodic function we constructed out of our aperiodic one is represented by its Fourier Series

$$\tilde{x}(t) = \sum_{k=-\infty}^{\infty} a_k e^{jk\omega_0 t} = \sum_{k=-\infty}^{\infty} \left(\frac{1}{T} X(\omega)\right) e^{j\omega t} \Big|_{\omega=k\omega_0}$$

Notice this is just rewrite  $a_k$  as the samples of the Fourier Transform  $X(\omega)$ .  $T = \frac{2\pi}{\omega_0}$  so

$$\tilde{x}(t) = \frac{1}{2\pi} \sum_{k=-\infty}^{\infty} \omega_0 X(\omega) e^{j\omega t} \Big|_{\omega=k\omega_0}$$

$$x(t) = \lim_{T \rightarrow \infty} \tilde{x}(t) = \lim_{\omega_0 \rightarrow 0} \tilde{x}(t) = \frac{1}{2\pi} \int_{-\infty}^{\infty} X(\omega) e^{j\omega t} d\omega$$

### 3.1.1 Properties of the CTFT

For all these properties, assume that  $x(t) \leftrightarrow X(\omega)$  and  $y(t) \leftrightarrow Y(\omega)$

**Linearity:**

$$ax(t) + by(t) \leftrightarrow aX(\omega) + bY(\omega)$$

**Time Shift:**

$$x(t - t_0) \leftrightarrow e^{-j\omega t_0} X(\omega)$$

**Time/Frequency Scaling:**

$$x(at) \leftrightarrow \frac{1}{|a|} X\left(\frac{\omega}{a}\right)$$

**Conjugation:**

$$x^*(t) \leftrightarrow X^*(-\omega)$$

**Derivative:**

$$\frac{d}{dt} x(t) \leftrightarrow j\omega X(\omega), \quad \frac{d}{d\omega} X(\omega) \leftrightarrow -jtx(t)$$

**Convolution/Multiplication:**

$$(x * y)(t) \leftrightarrow X(\omega)Y(\omega), x(t)y(t) \leftrightarrow \frac{1}{2\pi}(X * Y)(\omega)$$

**Frequency Shift:**

$$e^{j\omega_0 t}x(t) \leftrightarrow X(\omega - \omega_0)$$

**Parsevals Theorem:**

$$\int_{-\infty}^{\infty} |x(t)|^2 dt = \frac{1}{2\pi} \int_{-\infty}^{\infty} |X(\omega)|^2 d\omega$$

**3.1.2 Convergence of the CTFT**

A big question that arises when thinking about the Fourier Transform is whether or not the integral  $\int x(t)e^{-j\omega t}$  actually converges.

**Theorem 5** *If  $\int_{-\infty}^{\infty} |x(t)| dt$  converges, then  $X(\omega)$  exists and is continuous. In addition,  $X(\omega)$  approaches 0 as  $|\omega|$  approaches  $\infty$*

Conceptually, this theorem makes sense because

$$|x(t)e^{-j\omega t}| = |x(t)||e^{-j\omega t}| = |x(t)|$$

So if one converges, the other must converge. However, this means that  $x(t) = 1$ ,  $x(t) = \sin(\omega t)$ ,  $x(t) = \cos(\omega t)$  don't have a "strict" Fourier Series because the integral doesn't converge for these periodic signals. In order to get around this, we can define a "generalized" Fourier Transform which operates on periodic signals.

Starting with  $x(t) = 1$ , we know that in the frequency domain, the only constituent frequency is  $\omega = 0$ . This means that  $X(\omega) = k\delta(\omega)$  where  $k$  is some scalar. Using the Inverse Fourier Transform,

$$x(t) = \frac{1}{2\pi} \int k\delta(\omega)e^{j\omega t} d\omega = \frac{k}{2\pi}$$

That means  $k = 2\pi$ , so

$$x(t) = 1 \leftrightarrow X(\omega) = 2\pi\delta(\omega)$$

Now if we apply the frequency shift property, we see that

$$x(t) = e^{j\omega_0 t} = 2\pi\delta(\omega - \omega_0)$$

With this, we can define our generalized Fourier Transform for periodic signals.

**Definition 25** *The generalized Fourier Transform for a periodic signal  $x(t)$  is*

$$X(\omega) = \sum_{-\infty}^{\infty} a_k \cdot 2\pi\delta(\omega - \omega_k)$$

where  $a_k$  are the coefficients of the Fourier Series of  $x(t)$

This definition works because any periodic signal can be represented by its Fourier Series. The rationale behind using the Dirac Delta in this generalized Fourier Transform is explained by the Theory of Distributions which can be found in the Appendix.

### 3.2 Discrete Time Fourier Transform

**Definition 26** *The Discrete Time Fourier Transform converts aperiodic discrete signals into the frequency domain.*

$$X(\omega) = \sum_{-\infty}^{\infty} x[n]e^{-j\omega n}$$

The intuition for the discrete time Fourier transform is more or less the same as that of the Continuous Time Fourier Transform.

**Definition 27** *The Inverse Discrete Time Fourier Transform converts the frequency domain representation of a signal back into its time domain representation.*

$$x[n] = \frac{1}{2\pi} \int_{\langle 2\pi \rangle} X(\omega)e^{j\omega n} d\omega$$

#### 3.2.1 Properties of the DTFT

For all these properties, assume that  $x[n] \leftrightarrow X(\omega)$  and  $y[n] \leftrightarrow Y(\omega)$

**Time Shift:**

$$x[n - n_0] \leftrightarrow e^{-j\omega n_0} X(\omega)$$

**Frequency Shift:**

$$X(\omega - \omega_0) \leftrightarrow e^{j\omega_0 n} x[n]$$

**Time Reversal:**

$$x[-n] \leftrightarrow X(-\omega)$$

**Conjugation:**

$$x^*[n] = X^*(-\omega)$$

**Time Expansion:**

In discrete time, compression of a signal doesn't make sense because we can't have partial steps (i.e.  $n$  must be an integer). However, we can stretch a signal.

$$x_M[n] \leftrightarrow X(M\omega), x_M[n] = \begin{cases} x[\frac{n}{M}] & \text{when } M|n \\ 0 & \text{else} \end{cases}$$

**Derivative Property:**

$$nx[n] \leftrightarrow j \frac{d}{d\omega} X(\omega)$$

**Multiplication Property:**

$$x[n]y[n] \leftrightarrow \frac{1}{2\pi} \int_{2\pi} X(\theta)Y(\omega - \theta)d\theta$$

### Convolution Property:

$$(x * y)[n] = X(\omega)Y(\omega)$$

### 3.2.2 Convergence of the DTFT

Just like in continuous time, it was unclear whether or not the integral would converge, in discrete time, it is unclear if the infinite sum will converge. The convergence theorem for both are essentially the same.

**Theorem 6** *If  $\sum_{-\infty}^{\infty} |x[n]|$  converges, then  $X(\omega)$  exists and is continuous.*

Just like in continuous time, periodic signals like  $x[n] = 1, x[n] = \sin(\omega_0 t), x[n] = \cos(\omega_0 t)$ ... are problematic because they don't converge under the "strict" transform, so they require a generalized transform. In the frequency domain, a constant signal like  $x[n] = 1$  will be the sum of all frequencies. This will look like a sum of Dirac Deltas.

$$X(\omega) = k \sum_{l=-\infty}^{\infty} \delta(\omega - 2\pi l)$$

Applying the synthesis equation to this, we get

$$x(t) = \frac{1}{2\pi} \int_{2\pi} k \sum_{l=-\infty}^{\infty} \delta(\omega - 2\pi l) = \frac{k}{2\pi} \sum_{l=-\infty}^{\infty} \int_{2\pi} \delta(\omega - 2\pi l) = \frac{k}{2\pi} \int_{2\pi} \delta(\omega - 2\pi \cdot 0) = \frac{k}{2\pi}$$

Therefore  $k = 2\pi$ , so

$$x[n] = 1 \leftrightarrow X(\omega) = 2\pi \sum_{l=-\infty}^{\infty} \delta(\omega - 2\pi l)$$

and we can apply the frequency shift property to get

$$x[n] = e^{j\omega_0 n} \leftrightarrow X(\omega) = 2\pi \sum_{l=-\infty}^{\infty} \delta(\omega - \omega_0 - 2\pi l)$$

Once again using the Fourier Series representation of  $x[n]$ , we can define the generalized Discrete Time Fourier Transform.

**Definition 28** *For a periodic signal  $x[n]$ , the generalized Discrete Time Fourier Transform is*

$$x[n] \leftrightarrow 2\pi \sum_{-\infty}^{\infty} a_k \delta(\omega - \frac{2\pi}{N}k)$$

where  $a_k$  are the Fourier Series coefficients of  $x[n]$

### 3.3 Discrete Fourier Transform

Whereas the CTFT takes a continuous signal and outputs a continuous frequency spectrum and the DTFT takes a discrete signal and outputs a continuous, periodic frequency spectrum, the Discrete Fourier Transform takes a discrete periodic signal and outputs a discrete frequency spectrum.

**Definition 29** For a length  $N$  finite sequence  $\{x[n]\}_0^{N-1}$ , the Discrete Fourier Transform of the signal is a length  $N$  finite sequence  $\{X[k]\}_0^{N-1}$  where

$$X[k] = \sum_{n=0}^{N-1} x[n] e^{-j \frac{2\pi}{N} kn}$$

One way to interpret the DFT is in terms of the Fourier series for a discrete periodic signal  $\tilde{x}[n] = x[n \bmod N]$ . Recall that the coefficient of the  $k$ th term of the Fourier Series

$$a_k = \frac{1}{N} \sum_{n=0}^{N-1} x[n] e^{-j \frac{2\pi}{N} kn}$$

Notice that the  $a_k$  of the Fourier Series are the DFT values except scaled by a factor of  $N$ . This gives an intuitive inverse DFT.

**Definition 30** For a length  $N$  finite sequence  $\{X[k]\}_0^{N-1}$  representing the DFT of a finite periodic signal  $\{x[n]\}_0^{N-1}$ , the inverse DFT is given by

$$x[n] = \frac{1}{N} \sum_{k=0}^{N-1} X[k] e^{j \frac{2\pi}{N} kn}$$

One important property of the DFT is its complex conjugacy. When  $x[n]$  is a real valued signal, then  $X[n - k] = X[k]^*$ . This can easily be shown by substituting  $N - k$  into the DFT formula. Further intuition for the DFT comes from relating it to the DTFT. Suppose we have a finite signal  $x[n]$  which is 0 for  $n < 0$  and  $n > N - 1$ . The DTFT of this signal is

$$X(\omega) = \sum_{n=-\infty}^{\infty} x[n] e^{-j\omega n} = \sum_{n=0}^{N-1} x[n] e^{-j\omega n}$$

Suppose we sample the DTFT at intervals of  $\frac{2\pi}{N}k$ , then

$$X[k] = X\left(\frac{2\pi}{N}k\right) = \sum_{n=0}^{N-1} x[n] e^{-j \frac{2\pi}{N} kn}$$

Thus we can think of the DFT as a  $N$  point sample of the DTFT.

### 3.4 2D Fourier Transforms

So far, our Fourier Transforms have been limited to signals of a single dimension. However, in the real world, signals might be multidimensional (think images). Thankfully, each of the Fourier Transforms generalizes easily into higher dimensions.

$$\text{2D CTFT: } X(\omega_1, \omega_2) = \int_{-\infty}^{\infty} \int_{-\infty}^{\infty} x(t_1, t_2) e^{-j\omega_0 t} e^{-j\omega_1 t} dt_1 dt_2$$

$$\text{Inverse 2D CTFT: } x(t_1, t_2) = \frac{1}{(2\pi)^2} \int_{-\infty}^{\infty} \int_{-\infty}^{\infty} X(\omega_1, \omega_2) e^{j\omega_1 t_1} e^{j\omega_2 t_2} d\omega_1 d\omega_2$$

$$\text{2D DTFT: } X(\omega_1, \omega_2) = \sum_{n_2=-\infty}^{\infty} \sum_{n_1=-\infty}^{\infty} x[n_1, n_2] e^{-j\omega_1 n_1} e^{-j\omega_2 n_2}$$

$$\text{Inverse 2D DTFT: } x[n_1, n_2] = \sum_{\omega_2=-\infty}^{\infty} \sum_{\omega_1=-\infty}^{\infty} X(\omega_1, \omega_2) e^{j\omega_1 n_1} e^{j\omega_2 n_2}$$

$$\text{2D DFT: } X[k_1, k_2] = \sum_{n_2=0}^{N_2-1} \sum_{n_1=0}^{N_1-1} x[n_1, n_2] e^{-j\frac{2\pi}{N_1} k_1 n_1} e^{-j\frac{2\pi}{N_2} k_2 n_2}$$

$$\text{2D DFT: } x[n_1, n_2] = \sum_{k_2=0}^{N_2-1} \sum_{k_1=0}^{N_1-1} X[k_1, k_2] e^{j\frac{2\pi}{N_1} k_1 n_1} e^{j\frac{2\pi}{N_2} k_2 n_2}$$

Just like in 1 dimension, absolute summability/integrability guarantee the convergence of these transforms. It turns out that when a 2D signal is simply a multiplication of two 1D signals, the Fourier Transforms are very easy to compute.

**Theorem 7** *If  $x(t_1, t_2) = x(t_1)x(t_2)$ , then  $X(\omega_1, \omega_2) = X(\omega_1)X(\omega_2)$*

## 4 Generalized transforms

### 4.1 Laplace Transform

It turns out the CTFT is just a specific case of a more general transform called the Laplace transform.

**Definition 31**

$$X(s) = \int_{-\infty}^{\infty} x(t) e^{-st} dt \text{ for } s \in \mathbb{C}$$

Notice that the Fourier Transform is merely  $X(j\omega)$ . Like the Fourier Transform, the Laplace Transform does not always converge. The values of  $s$  for which the transform does converge is known as the region of convergence (ROC). If the ROC contains the imaginary axis, then the signal has a well-defined Fourier Transform.

Unlike the Fourier Transform, there is no easy way to take the Inverse Laplace Transform. However, for many LTI systems/signals, we can use partial fraction expansion and then use known Laplace Transform pairs in order to compute the inverse.

Two useful features of laplace transforms are their poles and zeros. Suppose

$$X(s) = \frac{N(s)}{D(s)}$$

The poles of the system are  $\{s|D(s) = 0\}$  and the zeros are  $\{s|N(s) = 0\}$

#### 4.1.1 Properties of the Laplace Transform

The properties of the Laplace transform are largely the same as the properties of the Fourier Transform. One must just be careful about the Region of Convergence. For all these properties, assume that  $x(t) \leftrightarrow X(s)$  and  $y(t) \leftrightarrow Y(s)$  with original region of convergence  $R$ .

**Linearity:**

$$ax(t) + by(t) \leftrightarrow aX(s) + bY(s)$$

**Time Shift:**

$$x(t - t_0) \leftrightarrow e^{-st_0} X(s)$$

**Time/Frequency Scaling:**

$$x(at) \leftrightarrow \frac{1}{|a|} X\left(\frac{s}{a}\right), \text{ ROC: } s \in aR$$

**Conjugation:**

$$x^*(t) \leftrightarrow X^*(s^*)$$

**Derivative:**

$$\frac{d}{dt}x(t) \leftrightarrow sX(s), \frac{d}{ds}X(s) \leftrightarrow -tx(t)$$

**Convolution/Multiplication:**

$$(x * y)(t) \leftrightarrow X(s)Y(s)$$

**Frequency Shift:**

$$e^{s_0 t} x(t) \leftrightarrow X(s - s_0), \text{ ROC: } s \in R + s_0$$

## 4.2 The Unilateral Laplace Transform

In the normal laplace transform, we integrate over all the real numbers. For the Unilateral Laplace Transform we only integrate over the right half of the real numbers.

$$\mathcal{X}(s) = \int_{0^-}^{\infty} x(t)e^{-st} dt$$



The because the unilateral laplace transform is basically the same as the original, the properties of it are largely the same as well. However, Convolution and Differentiation change.

**Convolution:**  $(x_1 * x_2)(t) \leftrightarrow \mathcal{X}_1(s)\mathcal{X}_2(s)$  if  $x_1$  and  $x_2$  are right sided (i.e 0 for  $t < 0$ )

This should be clear because the unilateral laplace transform only considers the right half of the reals, so unless the signal itself is right-sided, the convolution is going to blend together the left side of the signal with the right side.

**Differentiation:**  $\frac{d^n}{dt^n} \leftrightarrow s^n \mathcal{X}(s) - \sum_{k=1}^n s^{n-k} \frac{d^{k-1}}{dt^{k-1}} x(0^-)$

Unlike the regular Laplace transform, differentiating a signal introduces initial conditions for the the Unilateral Laplace Transform. This actually makes it useful for solving differential equations because given the differential equation, we can take the Unilateral Laplace Transform of both sides, solve for our variable in the Laplace domain, and then take the inverse Laplace Transform to convert back to the time domain.

### 4.3 The Z Transform

Just like the Laplace Transform generalizes the CTFT, the Z-Transform generalizes the DTFT.

$$X(z) = \sum_{n=-\infty}^{\infty} x[n]z^{-n}$$

When  $z = e^{j\omega}$ , we recover the DTFT

$$X(e^{j\omega}) = \sum_{n=-\infty}^{\infty} x[n]e^{-j\omega n}$$

We know that the DTFT will be well defined as long as the region of convergence of the Z-transform contains the unit circle (because that represents all points  $e^{j\omega}$ ). Unlike the ROC of the laplace transform, which is a rectangular section of the plane, the ROC of the Z-transform is a circular section. This means the only possible shapes for the ROC of a Z-transform are a ring, the interior of a circle, the exterior of a circle, or the empty set. For right-sided signals, the ROC is the exterior of the circle defined by the outermost pole. Like the Laplace transform, the best way to take the inverse Z transform is to use partial fraction decomposition.

#### 4.3.1 Properties of the Z-Transform

**Linearity:**

$$ax[n] + by[n] \leftrightarrow aX(z) + bY(z)$$

**Time Shift:**

$$x[n - n_0] \leftrightarrow z^{-n_0} X(z)$$

**Scaling:**

$$z_0^n x[n] \leftrightarrow X\left(\frac{z}{z_0}\right)$$

**Time Reversal:**

$$x[-n] \leftrightarrow X(z^{-1})$$

**Derivative:**

$$-nx[n] \leftrightarrow z \frac{dX(z)}{dz}$$

**Convolution/Multiplication:**

$$(x * y)[n] \leftrightarrow X(z)Y(z)$$

**Theorem 8 (Initial Value Theorem)** Given  $X(z)$  and  $x[n] = 0$  for  $n < 0$ , then

$$x[0] = \lim_{z \rightarrow \infty} X(z)$$

## 4.4 Unilateral Z-Transform

Like the Laplace Transform, the Z-Transform has a unilateral variant.

$$\mathcal{X}(z) = \sum_{n=0}^{\infty} x[n]z^{-n}$$

Like before, convolution with the Unilateral transform is only valid for right sided signals. The time-delay property also changes for the unilateral z-transform.

$$x[n - n_0] \leftrightarrow z^{-n_0} \mathcal{X}(s) + \sum_{k=1}^{n_0-1} z^{-n_0+k} x[-k]$$

Notice how this property can now help us solve difference equations because we can simply take the unilateral z-transform of both sides, solve for our output, and then convert back to the time domain.

## 5 Linear Time-Invariant Systems

**Definition 32** LTI systems are ones which are both linear and time-invariant.

### 5.1 Impulse Response of LTI systems

LTI systems are special systems because their output can be determined entirely the impulse response  $h[n]$ .

### 5.1.1 The Discrete Case

We can think of the original signal  $x[n]$  in terms of the impulse function.

$$x[n] = x[0]\delta[n] + x[1]\delta[n-1] + \dots = \sum_{k=-\infty}^{\infty} x[k]\delta[n-k]$$

This signal will be transformed in some way to get the output  $y[n]$ . Since the LTI system applies a functional  $F$  and the LTI is linear and time-invariant,

$$y[n] = F\left(\sum_{k=-\infty}^{\infty} x[k]\delta[n-k]\right) = \sum_{k=-\infty}^{\infty} x[k]F(\delta[n-k]) = \sum_{k=-\infty}^{\infty} x[k]h[n-k]$$

Notice this operation is the convolution between the input and the impulse response.

### 5.1.2 The Continuous Case

We can approximate the function by breaking it into intervals of length  $\Delta$ .

$$x(t) \approx \sum_{k=-\infty}^{\infty} x(k\Delta)\delta_{\Delta}(t-k\Delta)\Delta$$
$$x(t) = \lim_{\Delta \rightarrow 0} \sum_{k=-\infty}^{\infty} x(k\Delta)\delta_{\Delta}(t-k\Delta)\Delta$$

After applying the LTI system to it,

$$y(n) = \int_{-\infty}^{\infty} x(\tau)h(t-\tau)$$

Notice this operation is the convolution between the input and the impulse response.

## 5.2 Determining Properties of an LTI system

Because an LTI system is determined entirely by its impulse response, we can determine its properties from the impulse response.

### 5.2.1 Causality

**Theorem 9** *An LTI system is causal when  $h[n] = 0, \forall n < 0$*

**Proof 1** *Assume  $h[n] = 0, \forall n < 0$*

$$y[n] = (x * h)[n] = \sum_{k=-\infty}^{\infty} x[n-k]h[k] = \sum_{k=0}^{\infty} x[n-k]h[k]$$

Notice that this does not depend on time steps prior to  $n = 0$

### 5.2.2 Memory

**Theorem 10** An LTI system is memoryless if  $h[n] = 0, \forall n \neq 0$

Memoryless means that the system doesn't depend on past values, so its impulse response should just be a scaled version of  $\delta$ .

### 5.2.3 Stability

**Theorem 11** A system is stable if  $\sum_{n=-\infty}^{\infty} |h[n]|$  converges.

**Proof 2**

1. Assume  $|x[n]| \leq B_x$  to show  $|y[n]| < D$  where  $D$  is some bound.

$$|y[n]| = \left| \sum_{k=-\infty}^{\infty} x[n-k]h[k] \right| \leq \sum_k |x[n-k]h[k]| = \sum_k |x[n-k]| |h[k]| \leq B_x \sum_k |h[k]|$$

This means as long as  $\sum_k |h[k]|$  converges,  $y[n]$  will be bounded.

2. Assume  $\sum_n |h[n]|$  does not converge. Show that the system is unstable. Choose  $x[n] = \text{sgn}\{h[-n]\}$

$$y[n] = \sum_k x[n-k]h[k]$$

so

$$y[0] = \sum_k x[-k]h[k] = \sum_k |h[k]|$$

And this is unbounded, so  $y[n]$  is unbounded.

## 5.3 Frequency Response and Transfer Functions

**Definition 33** The frequency response of a system is the output when passed a purely oscillatory signal

If we pass a complex exponential into an LTI system, the output signal is the same signal but scaled. In otherwise, it is an eigenfunction of LTI systems.

$$y(t) = \int_{-\infty}^{\infty} e^{s(t-\tau)} h(\tau) d\tau = e^{st} \int_{-\infty}^{\infty} e^{-s\tau} h(\tau) d\tau$$

The integral is a constant, and the original function is unchanged. The same analysis can be done in the discrete case.

$$y[n] = \sum_{k=-\infty}^{\infty} z^{n-k} h[k] = z^n \sum_{k=-\infty}^{\infty} z^{-k} h[k]$$

We give these constant terms a special name called the transfer function.

**Definition 34** The frequency response of an LTI system  $H(j\omega)$  is how the system scales a pure tone of frequency  $\omega$

$$H(\omega) := \int_{-\infty}^{\infty} h(\tau)e^{-j\omega\tau} d\tau, H(\omega) := \sum_{k=-\infty}^{\infty} h[k]e^{-j\omega k}$$

**Notice:** The frequency response is the fourier transform of the impulse response! This means the Fourier Transform takes us from the impulse response of the system to the frequency response. There is no reason to limit ourselves to the Fourier Domain though

**Definition 35** The transfer function of an LTI system  $H(s)$  is how the system responds to complex exponentials.

The transfer function is merely the Laplace Transform of the impulse response. In many ways, this can be more useful than the frequency response.

### 5.3.1 Stability of transfer functions

Recall that an LTI system is stable if the impulse response is absolutely integrable. We can determine this from the transfer function.

**Theorem 12** A causal continuous LTI system is stable iff all poles of  $H(s)$  have negative real parts.

The proof of this theorem stems from some facts about the Laplace Transform. If the system is causal, then the ROC is the half plane demarcated by the right most pole. When this ROC includes the imaginary axis, the Fourier Transform is well defined, and this only happens when  $h(t)$  is absolutely integrable. Applying the same logic to the discrete case,

**Theorem 13** A causal discrete LTI system is stable iff all poles of  $H(z)$  lie within the unit circle.

This is because we know the ROC extends from the right-most pole for causal systems, and for the Fourier Transform to exist (making  $h[n]$  absolutely integrable), the ROC must contain the unit circle.

### 5.3.2 Bode Plots

Because transfer functions, and hence the frequency response, can be quite complex, we need a easy way to visualize how a system responds to different frequencies.

**Definition 36** A Bode Plot is a straight-line approximation plot of  $|H(j\omega)|$  and  $\angle H(j\omega)$  on a log-log scale

The log-log scale not only allows us to determine the behavior of Bode plots over a large range of frequencies, but they also let us easily figure out what the plot looks like because it converts the frequency response into piecewise linear components.

To see why, lets write our transfer function in polar form.

$$H(j\omega) = K \frac{(j\omega)^{N_{z0}} \prod_{i=0}^n (1 + \frac{j\omega}{\omega_{zi}})}{(j\omega)^{N_{p0}} \prod_{k=0}^m (1 + \frac{j\omega}{\omega_{pk}})} = K e^{j\frac{\pi}{2}(N_{z0}-N_{p0})} \frac{\prod_{i=0}^n r_{zi}}{\prod_{k=0}^m r_{pk}} e^{j(\sum_{i=0}^n z_i - \sum_{k=0}^m p_k)}$$

Each  $r$  is the magnitude of a factor  $1 + \frac{j\omega}{\omega_n}$  where  $\omega_n$  is either a root or a pole, and the  $z_i, p_k$  are the phases of each factor. By writing  $H(j\omega)$  this way, it is clear that

$$|H(\omega)| = K \frac{\prod_{i=0}^n r_{zi}}{\prod_{k=0}^m r_{pk}}$$

If we take the log of this, we get

$$\log(|H(\omega)|) = \log(K) + \sum_{i=0}^n \log(r_{zi}) - \sum_{k=0}^m \log(r_{pk})$$


For Bode plots, we use the decibel scale, meaning we will multiply this value by 20 when constructing our plot. The exponential form of  $H(j\omega)$  tells us that

$$\angle H(j\omega) = \frac{\pi}{2}(N_{z0} - N_{p0}) + \left( \sum_{i=0}^n z_i - \sum_{k=0}^m p_k \right)$$

Next, we should verify if we can approximate these equations as linear on a log-log scale. Take the example transfer function  $H(j\omega) = \frac{1}{1+\frac{j\omega}{\omega_p}} = \frac{1}{r_p} e^{-j\theta_p}$ .

$$\begin{aligned} \text{if } \omega = \omega_p & \quad H(j\omega) = \frac{1}{1+j} & r_p = \sqrt{2} & \theta_p = \frac{\pi}{4} \\ \text{if } \omega = 10\omega_p & \quad H(j\omega) = \frac{1}{1+10j} & r_p \approx 10 & \theta_p \approx \frac{\pi}{2} \\ \text{if } \omega = 0.1\omega_p & \quad H(j\omega) = \frac{1}{1+0.1j} & r_p \approx 1 & \theta_p \approx 0 \end{aligned}$$


Thus we can see at decades away from the poles and zeros, the magnitudes and the phases will have less of an effect. Let's try constructing the Bode Plot for this transfer function.

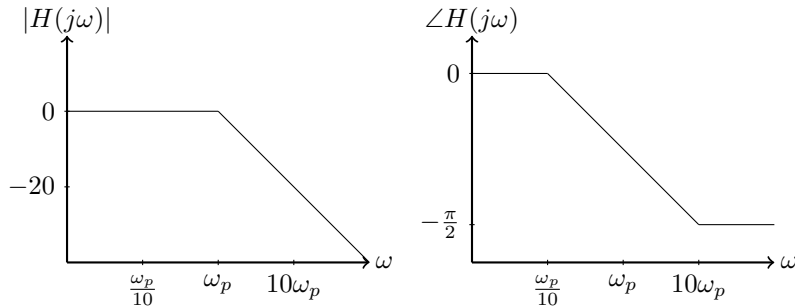

For the magnitude plot, since there are no poles or zeros at  $\omega = 0$ , we draw a straight line until the pole kicks in at  $\omega = \omega_p$  at which point the slope of the line will be -1. For the phase plot, we apply the same logic, except the pole kicks in at  $\frac{\omega_p}{10}$  (to see why, look above to see how at  $\omega = \omega_p$ , the phase is  $-\frac{\pi}{4}$ ). We can apply this same logic for more complicated transfer functions too. Lets take

$$H(j\omega) = 10^9 \frac{(1 + \frac{j\omega}{10^9})}{(j\omega)(1 + \frac{j\omega}{10^7})}$$

Notice we have a zero at  $10^9$ , poles at  $1, 10^7$ , and 9 zeros at  $\omega = 0$ . With this information, we can see the plots will look like this:

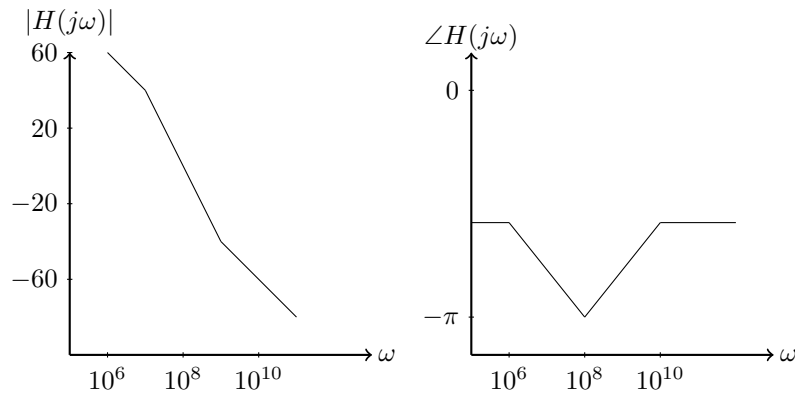

The pole at 0 kicks in immediately, causing the decreasing magnitude and starting the phase at  $-\frac{\pi}{2}$ . The second pole at  $10^7$  will kick in next, followed by the zero at  $10^9$ .

## 5.4 Special LTI Systems

### 5.4.1 Linear Constant Coefficient Difference/Differential Equations

**Definition 37** A linear constant coefficient difference equation is a system of one of the following forms

$$\text{Discrete: } \sum_{k=0}^N a_k y[n-k] = \sum_{k=0}^M b_k x[n-k]$$

$$\text{Continuous: } \sum_{k=0}^N a_k \frac{d^k y}{dt^k} = \sum_{k=0}^M b_k \frac{d^k x}{dt^k}$$

**Theorem 14** Systems described by a linear constant coefficient difference equation are causal LTI iff  $a_0 \neq 0$  and the system is initially at rest ( $y[n] = 0$  for  $n < n_0$  where  $n_0$  is the first instant  $x[n] \neq 0$ )

Notice that if  $a_1..a_n = 0$ , then the system will have a finite impulse response because eventually the signal will die out. It turns out that all causal FIR systems can be written as a linear constant coefficient difference equation.

**Theorem 15** *Systems of the form*

$$y[n] = \sum_{k=0}^M b_k x[n-k]$$

are causal, FIR LTI systems and their impulse response is

$$h[n] = \sum_{k=0}^M b_k \delta[n-k]$$

**Theorem 16** *Given a constant coefficient difference/differential equation, the transfer function is*

$$H(s) = \frac{Y(\omega)}{X(\omega)} = \frac{\sum_{k=0}^M b_k s^k}{\sum_{k=0}^N a_k s^k} \text{ [Continuous Case]}$$

$$H(z) = \frac{Y(\omega)}{X(\omega)} = \frac{\sum_{k=0}^M b_k z^{-k}}{\sum_{k=0}^N a_k z^{-k}} \text{ [Discrete Case]}$$

**Proof 3**

*The Continuous Case*

$$\sum_{k=0}^N a_k \frac{d^k y}{dt^k} = \sum_{k=0}^M b_k \frac{d^k x}{dt^k}$$

Taking the Laplace Transform,

$$\sum_{k=0}^N a_k s^k Y(\omega) = \sum_{k=0}^M b_k s^k X(\omega)$$

$$\frac{Y(s)}{X(s)} = \frac{\sum_{k=0}^M b_k s^k}{\sum_{k=0}^N a_k s^k}$$

$$y(t) = (h * x)(t) \leftrightarrow H(\omega)X(\omega)$$

$$\therefore H(s) = \frac{Y(s)}{X(s)} = \frac{\sum_{k=0}^M b_k s^k}{\sum_{k=0}^N a_k s^k}$$

*The Discrete Case*

$$\sum_{k=0}^N a_k y[n-k] = \sum_{k=0}^M b_k x[n-k]$$



Taking the Z Transform

$$\sum_{k=0}^N a_k z^{-k} Y(z) = \sum_{k=0}^M b_k z^{-k} X(z)$$

$$H(z) = \frac{\sum_{k=0}^M b_k z^{-k}}{\sum_{k=0}^N a_k z^{-k}}$$

### 5.4.2 State Space Equations

When we have a LCCDE of the form

$$\sum_{i=0}^N a_i \frac{d^i y}{dt^i} = b_0 x(t)$$

we can represent the system in state space form where we keep track of a state vector  $\vec{z}(t) \in \mathbb{R}^N$ .

$$\frac{d}{dt} \vec{z}(t) = A\vec{z}(t) + Bx(t)$$

$$y(t) = C\vec{z}(t) + Dx(t)$$

The matrices  $A, B, C, D$  describe the dynamics of the system. If we want to find the transfer function of the system, we can use the Laplace transform.

$$s\vec{Z}(s) = A\vec{Z}(s) + BX(s) \implies \vec{Z}(s) = (sI - A)^{-1}BX(s)$$

$$\therefore Y(s) = C(sI - A)^{-1}BX(s) + DX(s)$$

$$\therefore H(s) = C(sI - A)^{-1}B + D$$

Notice that the poles of the transfer function are simply the eigenvalues of  $A$ . This is because if  $s$  is an eigenvalue of  $A$ ,  $(sI - A)^{-1}$  is not invertible so the transfer function is undefined just like it is at the poles.

**Important: This is valid in Discrete Time as well!**

In general, state-space equations are useful because they allow us to find transfer functions of complex systems very easily.

- Step 1: Label the output of delay (discrete) or differentiation (continuous) blocks as the state variables.
- Step 2: Write the state equations using inputs and delays/derivatives. Express each as a weighted sum of states and inputs.
- Step 3: Write  $y[n]$  in terms of  $x[n]$  and the state variables
- Step 4: Use the formula above to find the transfer function.

### 5.4.3 Second Order Systems

Most of the time, higher order systems only have 2 dominant poles. Accordingly, they can be approximated by second order systems (i.e systems with two poles). One way to write the transfer function of this system is

$$H(s) = \frac{\omega_n^2}{s^2 + 2\zeta\omega_n s + \omega_n^2}$$

The parameter  $\zeta$  is known as the damping ratio, and the parameter  $\omega_n$  is known as the natural frequency. This parameterization is useful because it gives us an insight into how the system will behave. First, notice that when  $\zeta \in [0, 1]$ , we will get two complex poles. Suppose we want to find the impulse response of this system. Because the poles are complex, we can write the poles in the form

$$\overbrace{-\omega_n \cos\theta}^{\sigma} \pm j \overbrace{\omega_n \sin\theta}^{\omega_d}$$

where  $\zeta = \cos\theta$ . These new parameters allow us to rewrite our transfer function as

$$H(s) = \frac{\omega_n^2}{(s + \sigma)^2 + \omega_d^2}$$

Using common laplace transform pairs, this corresponds to

$$h(t) = \frac{\omega_n^2}{\omega_d} e^{-\sigma t} \sin(\omega_d t) u(t)$$

This is a damped sinusoid. Notice how  $\zeta$ , which is related to  $\sigma$  controls the exponential and therefore the damping factor. If we find the step response of the second order system, we will get

$$y(t) = \left[ 1 - e^{-\sigma t} \left( \cos\omega_d t + \frac{\sigma}{\omega_d} \sin\omega_d t \right) \right] u(t)$$

There are several key features of this step response:


- Rise Time ( $t_r$ ): Time to go from 10% to 90% of the steady state value
- Peak Overshoot ( $M_p$ ):  $\frac{\text{peak} - \text{steady}}{\text{steady}}$
- Peaking Time ( $t_p$ ): Time to peak overshoot
- Settling Time ( $t_s$ ): Time after which step response stays within 1% of steady state.

Using the step response, we can calculate some of these values.

$$t_p = \frac{\pi}{\omega_d} \quad M_p = y\left(\frac{\pi}{\omega_d}\right) = 1 + e^{-\sigma \frac{\pi}{\omega_d}} \quad t_s = \frac{\ln(0.01)}{-\sigma}$$

## 6 Feedback Control

In feedback control, we have some physical system  $H_p(s)$  called a plant which we would like to control using a system of our choice  $H_c(s)$  in order to follow some reference signal  $r(t)$ .

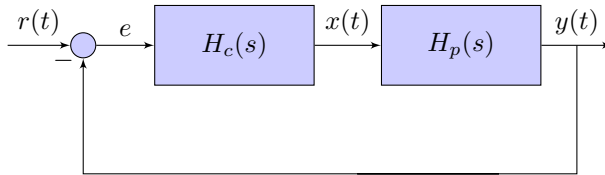

Notice how the output signal is subtracted from a reference signal, and we use the difference (a.k.a the error) to determine what input we pass into the plant. Looking at the overall transfer function of the system, we see that

$$\begin{aligned} Y(s) &= (R(s) - Y(s))H_c(s)H_p(s) \\ (1 + H_c(s)H_p(s))Y(s) &= H_c(s)H_p(s)R(s) \\ H(s) &= \frac{Y(s)}{R(s)} = \frac{H_c(s)H_p(s)}{1 + H_c(s)H_p(s)} \end{aligned}$$

Depending on what control we use for  $H_c(s)$ , we can shape this transfer function to be what we want.

### 6.1 Types of Control

#### 6.1.1 Constant Gain Control

When  $H_c(s) = K_0$ , this is known as constant gain control.

$$H(s) = \frac{K_0 H_p(s)}{1 + K_0 H_p(s)}$$

The poles of this system are clearly when  $1 + K_0 H_p(s) = 0$ .

#### 6.1.2 Lead Control

Lead controllers are of the form

$$H_c(s) = K_0 \frac{s - \beta}{s - \alpha}$$

Their poles are when

$$1 + K_0 \frac{s - \beta}{s - \alpha} H_p(s) = 0$$

### 6.1.3 Integral Control

Integral controller are of the form

$$H_c(s) = \frac{K_0}{s}$$

Their poles are when

$$1 + \frac{K_0}{s} H_p(s) = 0$$

## 6.2 Root Locus Analysis

For all forms of control, we need to choose a constant which places our poles where we want. Root Locus Analysis is the technique which helps us determine how our poles will move as  $K_0 \rightarrow \infty$ . Assuming we only have a single gain to choose, we the poles of the new transfer function will be the roots of

$$1 + K_0 H(s)$$

where  $H(s)$  is some transfer function that results in the denominator (For example, in constant gain control,  $H(s) = H_p(s)$  but for lead control,  $H_s = \frac{s-\beta}{s-\alpha} H_p(s)$ ).

**Definition 38** *The root locus is the set of all points  $s_0 \in \mathbb{C}$  such that  $\exists K_0 > 0$  such that  $1 + K_0 H(s) = 0$ .*

This definition implies that  $H(s_0) = \frac{1}{K_0}$  for some  $K_0$ , meaning the root locus is all points such that  $\angle H(s_0) = -180^\circ$ . The first step of RLA is to factor the numerator and denominator of  $H(s)$

$$H(s) = \frac{\prod_{i=0}^m (s - \beta_i)}{\prod_{i=0}^n (s - \alpha_i)}$$

As  $k \rightarrow 0, H(s_0) = -\frac{1}{K_0} \rightarrow \infty$ , so the root locus begins at the poles. As  $k \rightarrow \infty, H(s_0) = -\frac{1}{K_0} \rightarrow 0$ , so the root locus will end at the open loop zeros. However, if  $m < n$ , (i.e there are more poles than 0's), not all of the poles can converge to a zero. Instead  $n - m$  branches will approach  $\infty$  with asymptotes at

$$\frac{\sum_i \alpha_i - \sum_i \beta_i}{n - m}$$

and angles of

$$\frac{180 + (i - 1) * 360}{n - m}$$


The final rule of RLA is that parts of the real line left of an odd number of real poles and zeros are on the root locus. RLA tells us that we have to be careful when choosing our gain  $K_0$  because we could by mistake cause instability. In particular, high gain will cause instability if

- $H(s)$  has zeros in the right half of the plane
- if  $n - m \geq 3$ , then the asymptotes will cross the imaginary axis.

### 6.3 Feedback Controller Design

When we design systems to use in feedback control, there are certain properties we want besides just basic ones like stability. Because signals can be thought of as a series of step signals, when analyzing these properties, we will assume  $r(t) = u(t)$

#### 6.3.1 Steady State Tracking Accuracy

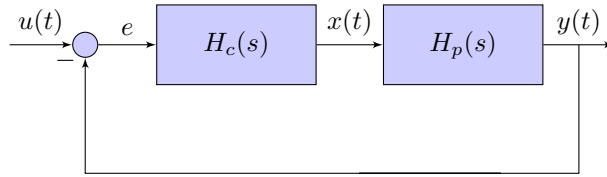

**Definition 39** A system has steady state tracking accuracy if the different between the reference and the output signals tends to 0 as  $t \rightarrow \infty$

$$e_{ss} := \lim_{t \rightarrow \infty} e(t) = 0$$

A useful theorem which can help us evaluate this limit is the final value theorem.

**Theorem 17 (Final Value Theorem)**

$$\lim_{t \rightarrow \infty} e(t) = \lim_{s \rightarrow 0} sE(s)$$

As long as a limit exists and  $e(t) = 0$  for  $t < 0$

Looking at the relationship between  $E(s)$  and  $R(s)$ , we see that


$$\frac{E(s)}{R(s)} = \frac{1}{1 + H_c(s)H_p(s)} \implies E(s) = \frac{\frac{1}{s}}{1 + H_c(s)H_p(s)}$$

Thus

$$e_{ss} = \lim_{s \rightarrow 0} \frac{1}{1 + H_c(s)H_p(s)}$$

Thus as long as  $H_c(s)H_p(s)$  has at least one pole at  $s = 0$ , then  $e_{ss} = 0$ . Notice that integral control gives us a pole at  $s_0$ , so it is guaranteed that an integral controller will be steady-state accurate.

### 6.3.2 Disturbance Rejection

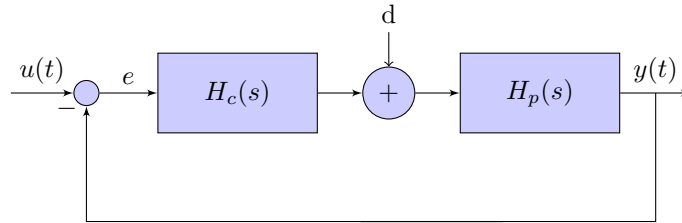

Sometimes the output of our controller can be disturbed before it goes into the plant. Ideally, our system should be robust to these disturbances.

$$Y(s) = H_p(s) [H_c(s)(R_s - Y_s) + D(s)]$$


$$Y(s) = \frac{H_c(s)H_p(s)}{1 + H_c(s)H_p(s)} R(s) + \frac{H_p(s)}{1 + H_c(s)H_p(s)} D(s)$$

The system will reject disturbances if the  $\frac{H_p(s)}{1 + H_c(s)H_p(s)} D(s)$  is close to 0 in the steady state. Assuming that  $d(t) = u(t)$ , we see that

$$\delta_{ss} = \lim_{s \rightarrow 0} s \frac{H_p(s)}{1 + H_c(s)H_p(s)} \frac{1}{s} = \lim_{s \rightarrow 0} \frac{H_p(s)}{1 + H_c(s)H_p(s)}$$

Thus as long as  $H_c$  has a pole at 0, then the system will reject disturbances. Notice that integral control guarantees disturbance rejection as well.

### 6.3.3 Noise Insensitivity

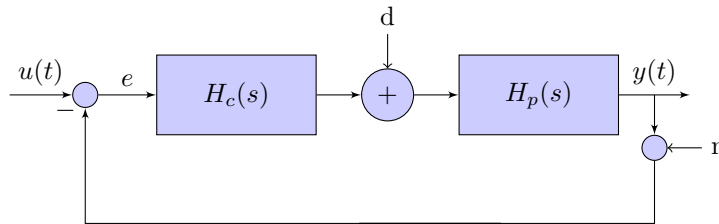

In real systems, our measurement of the output  $y(t)$  is not always 100% accurate. One way to model this is to add a noise term to the output. Looking at the relationship between the noise and the output signal, we see

$$H(s) = \frac{-H_c(s)H_p(s)}{1 + H_c(s)H_p(s)}$$

In order to reject this noise, we want this term to be close to 0, so ideally  $H_c(s)H_p(s) \ll 1$  as  $s \rightarrow 0$ . However, this conflicts with our desire for  $H_c(s)H_p(s)$

to have a pole at 0 to guarantee steady state tracking. Thus it is difficult to make a controller that is both accurate and robust to noise. However, because noise is usually a high frequency signal and the reference is a low frequency signal, we can mitigate this by choosing  $H_c(s)H_p(s)$  to be a low-pass filter.

## 7 Sampling

### 7.1 Continuous Time

Sampling a continuous-time signal means representing it as a sequence of points measured at regular intervals  $T$ . Notice that if we were to take a signal  $x(t)$  and multiply it by an impulse train, then we would get a series of impulses equal to  $x(t)$  at the sampling points and 0 everywhere else. We can call this signal  $x_p(t)$ .

$$p(t) = \sum_{k=-\infty}^{\infty} \delta(t - kT)$$

$$x_p(t) = x(t)p(t) = \sum_{k=-\infty}^{\infty} x(t)\delta(t - kT)$$


In the Fourier Domain,

$$X_p(\omega) = \frac{1}{2\pi} X(\omega) * P(\omega)$$


$$P(\omega) = \frac{2\pi}{T} \sum_{k=-\infty}^{\infty} \delta(\omega - k\omega_0)$$

$$\therefore X_p(\omega) = \frac{1}{2\pi} \int_{-\infty}^{\infty} X(\theta)P(\omega - \theta)d\theta = \frac{1}{T} \sum_{k=-\infty}^{\infty} X(\omega - k\omega_0)$$

What this tells us is that the Fourier Transform of our sampled signal is a series of copies of  $X(\omega)$ , each centered at  $k\omega_0$  where  $\omega_0 = \frac{2\pi}{T}$ . For example, lets say that our original signal has the following Fourier Transform. Notice the signal is band-limited by  $\omega_M$ .

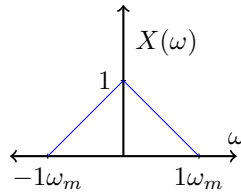


There are two major cases: if  $\omega_0 > 2\omega_m$  and  $\omega_0 < 2\omega_m$ .  
**Case One:**  $\omega_s > 2\omega_m$

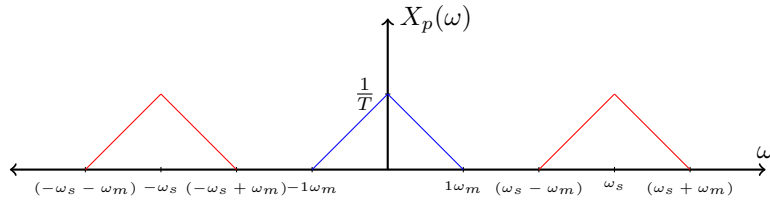

When  $\omega_s > 2\omega_M$ , the shifted copies of the original  $X(\omega)$  (shown in blue) do not overlap with each other or with the original copy. If we wanted to recover the original signal, we could simply apply a low pass filter to isolate the unshifted copy of  $X(\omega)$  and then take the inverse Fourier Transform.

**Case Two:**  $\omega_s < 2\omega_m$

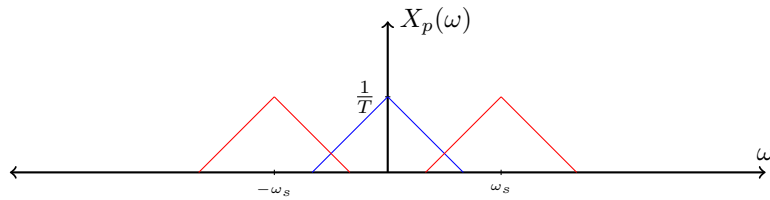

Notice how in this case, the shifted copies overlap with the original  $X(\omega)$ . This means in our sampled signal, the higher frequency information is bleeding in with the lower frequency information. This phenomenon is known as aliasing. When aliasing occurs, we cannot simply apply a low pass filter to isolate the unshifted copy of  $X(\omega)$ .

When  $\omega_0 = 2\omega_M$ , then our ability to reconstruct the original signal depends on the shape of its Fourier Transform. As long as  $X_p(k\omega_m)$  are equal to  $X(\omega_m)$  and  $X(-\omega_m)$ , then we can apply an LPF because we can isolate the original  $X(\omega)$  and take its inverse Fourier Transform.

Remember that an ideal low pass filter is a square wave in the frequency domain and a sinc in the time domain. Thus if we allow

$$X_r(\omega) = X_p(\omega) \cdot \begin{cases} T & |\omega| < \frac{\omega_s}{2} \\ 0 & \text{else} \end{cases}$$

then our reconstructed signal will be

$$x_r(t) = x_p(t) * \text{sinc}\left(\frac{t}{T}\right) = \sum_{n=-\infty}^{\infty} X(nT) \text{sinc}\left(\frac{t-nT}{T}\right)$$

This is why we call reconstructing a signal from its samples "sinc interpolation." This leads us to formulate the Nyquist Theorem.



**Theorem 18 (CT Nyquist Theorem)** *Suppose a continuous signal  $x$  is bandlimited and we sample it at a rate of  $\omega_s > 2\omega_M$ , then the signal  $x_r(t)$  reconstructed by sinc interpolation is exactly  $x(t)$*

## 7.2 Discrete Time

Sampling in discrete time is very much the same as sampling in continuous time. Using a sampling period of  $N$  we construct a new signal by taking an impulse train and multiplying elementwise with the original signal.

$$p[n] = \sum_{n=-\infty}^{\infty} \delta[n - kN]$$

$$x_p[n] = x[n]p[n] = \sum_{n=-\infty}^{\infty} x[kN]\delta[n - kN]$$

$$X_p(\omega) = \frac{1}{N} \sum_{k=0}^{N-1} X(\omega - k\omega_s)$$

Our indices only go from  $k$  to  $N - 1$  in the Fourier Domain because we can only shift a particular number of times before we start to get repeated copies. This is the impulse train sampled signal. It has 0's at the unsampled locations. If we want to, we could simply remove those zeros and get a downsampled signal

$$x_p[n] = x[Nn]$$

Like in continuous time, the reconstructed signal is recovered via sinc interpolation.

$$x_r[n] = \sum_{k=-\infty}^{\infty} x_p[n] \text{sinc}\left(\frac{n - kN}{N}\right)$$

The Nyquist Theorem in DT will tell us when this works.

**Theorem 19 (DT Nyquist Theorem)** *Suppose a discrete signal  $x$  is bandlimited by  $\frac{\pi}{N}$  and we sample it at a rate of  $\omega_s > 2\omega_M$ , then the signal  $x_r[n]$  reconstructed by sinc interpolation is exactly  $x[n]$*

Thus as long as the Nyquist Theorem holds, we can take a downsampled signal and upsample it (i.e reconstruct the missing pieces) by expanding  $y$  by a factor of  $N$  and putting 0's for padding, and then applying sinc-interpolation to it.

## 7.3 Sampling as a System


Notice that we have two ways of representing our sample signal. We can either write it as a discrete time signal  $x_d[n] = x(nT)$  or we can write it as an impulse

train  $x_p(t) = \sum_{-\infty}^{\infty} x(nT)\delta(t - nT)$ . Based on their Fourier Transforms,

$$X_d(\Omega) = \sum_{n=-\infty}^{\infty} x(nT)e^{-j\Omega n}$$

$$X_p(\omega) = \sum_{n=-\infty}^{\infty} x(nT)e^{-j\omega nT}$$

Thus if we let  $\Omega = \omega T$ , then we see that these two representations of a signal have the same Fourier Transforms and thus contain the same information. This means that for some continuous signals, convert them to discrete time via sampling, use a computer to apply an LTI system, and convert the result back to a CT output.

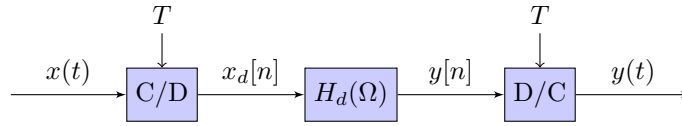

We must be careful though because as long as the DT system we apply is LTI, the overall CT system will be linear too, but it will not necessarily be time invariant because sampling inherently depends on the signal's timing.

$$Y_d(\Omega) = H_d(\Omega)X_d(\Omega) = H_d(\Omega)X_p\left(\frac{\Omega}{T}\right)$$

$$Y_p(\omega) = Y_d(\omega T) = H_d(\omega T)X_p(\omega)$$

$$Y(\omega) = \begin{cases} T & |\omega| < \frac{\omega_s}{2} \\ 0 & |\omega| \geq \frac{\omega_s}{2} \end{cases} \cdot Y_p(\omega) = \begin{cases} TH_d(\omega T)X_p(\omega) & |\omega| < \frac{\omega_s}{2} \\ 0 & |\omega| \geq \frac{\omega_s}{2} \end{cases}$$

Assuming that the Nyquist theorem holds,

$$X_p(\omega) = \frac{1}{T}X(\omega)$$

$$\therefore Y(\omega) = \begin{cases} H_d(\omega T)X(\omega) & |\omega| < \frac{\omega_s}{2} \\ 0 & |\omega| \geq \frac{\omega_s}{2} \end{cases}$$

$$\therefore H_{system} = \begin{cases} H_d(\omega T) & |\omega| < \frac{\omega_s}{2} \\ 0 & |\omega| \geq \frac{\omega_s}{2} \end{cases}$$

This shows us that as long as the Nyquist theorem holds, we can process continuous signals with a discrete time LTI system and still have the result be LTI.

## 8 Appendix

### 8.1 Theory of Distributions

The Theory of Distributions is the mathematical framework which underlies the generalized Fourier Transforms.

**Definition 40** Given a test function  $x$ , a distribution  $T$  operates on  $x$  to produce a number  $\langle T, x \rangle$ .

**Definition 41** The distribution induced by a function  $g$  is defined as

$$\langle T_g, x \rangle = \int_{-\infty}^{\infty} g(t) * x(t) dt$$

Notice two things:

- $\langle T_g, x \rangle$  is linear
- $\langle \alpha T_g, x \rangle = \alpha^* \langle T_g, x \rangle$

With these definitions, we can now define the Dirac delta in terms of distributions. Let  $g$  be any function such that

$$\int_{-\infty}^{\infty} g(t) dt = 1$$

Define  $g_\epsilon$  to be

$$g_\epsilon = \frac{1}{\epsilon} g\left(\frac{t}{\epsilon}\right)$$

Now we can define  $\delta(t) = \lim_{\epsilon \rightarrow 0} T_{g_\epsilon}$

$$\langle \delta, x \rangle = \int_{-\infty}^{\infty} \delta(t) x(t) dt = x(0)$$

which is the property of the Dirac Delta we want. Now we can define the generalized Fourier Transform in terms of distributions.

**Definition 42** The generalized Continuous Time Fourier Transform of a distribution  $T$  is

$$\langle FT, X \rangle = 2\pi \langle T, x \rangle$$

for test function  $x$  whose Fourier Transform is  $X$